



NOTES:

DURING OPERATION, ANALYZER MUST BE IN THE UPRIGHT ORIENTATION AS SHOWN.

DO NOT BLOCK BOTTOM VENTILATION ACCESS OF ANALYZER BELOW THE FEET.

DIMENSIONS ARE APPROXIMATE MILLIMETERS (INCHES)

H				INSTRUMENT CORPORATION LA PORTE, INDIANA USA	DATE: 6-29-06
G					SCALE: N.T.S.
F					DRAWN BY: DB
E					APPROVED BY:
D					SUPERSEDES: 1-10926
C					DRAWING NUMBER:
B				TITLE: INSTRUCTION DRAWING FOR MODEL 6900 ANALYZER	2-12664
A					
	REVISIONS	BY	DATE		